VERTICAS


SMART CARD

USER MANUAL

English

Specifications
- Size: 54 × 85,6 × 2 mm
- Battery Capacity: 100 mAh (Wireless charging)
- Battery: Lithium polymer batteries
- Charging time: less than 1.5 hours
- Working time: 8 months (Rechargeable)
- Net weight: 12.4 g
- App name: Apple Find My App and Android “Find Hub”

Description of Parts

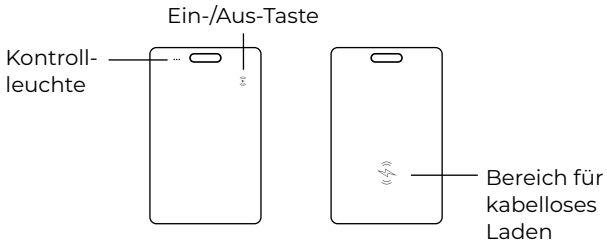

Battery Rechargeable
When battery is drained, charge it with any wireless charger that meets the QI Standard.
- This item includes a built-in rechargeable Lithium Polymer battery.
- The LED light in red when charging, change to green light when fully charged.

Instruction for Use
- Power on: Press the Power button once. A tone will sound, indicating it is powered on and will be in pairing status.

- Power off: Press and hole the Power button for 3 seconds, it should beep twice, indicating it is powered off.

- Confirming the device status: Double-click the this item Power button. This item should beep once if Power on. If no beep is heard, then this item is Power off.

- Pairing mode: When the this item is switched on, you can pair it with the Apple Find My app or Google’s Find Hub app. If the this item is switched on and is not paired within around 5 minutes, it will switched off automatically.

- Factory reset: After disconnecting the this item from your phone, please reset it to factory settings before connecting it to a new phone. To reset to factory settings, press the button four times rapidly and hold it a fifth time until you hear a ring tone.

Instruction for IOS

* Each this item can only be paired with one device.

1. Download the Apple “Find My” App from the App store.
2. Power on the this item.
3. Open the “Find My” App and click on “items”.
4. Tag “Add Object” or Tag “+”.
5. Click “Add other item”, “COTECi-TR-042”, then “connect”.
6. Follow the on-screen instructions to complete the connection.
7. Setup complete.

System Requirements and Compatibility
- Apple ID
- iPhone models with iOS 14.5 or later.
- iPad models with iPadOS 14.5 or later.

Features
- Find Items - Tap “Play Sound” to make this item beep when it is nearby.
- Find your Item’s location – this item’s last known location will appear on the map as emoji you choose during set-up, tap “Directions” to navigate to the last known location.

Notification
- Enable the “Notify When Found” toggle, when this item’s location is seen by another “Find My” enabled device, you will receive a notification of its updated location.
- Enable the “Notify When Left Behind” toggle, you will receive a notification when you leave this item behind and it is no longer in range of your device.

Note: “Notify When Found” can only be activated when this item is out of range.

Lost Mode
When your this item is lost under “Lost Mode”, tap the “Enable” tab, a screen calling Lost Mode will pop up, tab “Continue”. You can enter your phone number or email address and tap “Next”.
- You may enter a message that will be shared with the person that finds your this item.
- Tap “Activate” to enable “Lost Mode”.

Note:
- When “Lost Mode” is enabled, “Notification When Found” is automatically enabled.
When “Lost Mode” is enabled, your this item is locked and cannot be paired to a new device.

Change name and emoji
The Name and emoji of the this item can be changed.

Remove Item
- Make sure „Lost Mode“ is disabled and click „Remove Item“. After selecting the option, the system will pop up „Remove Item?“ and click „Remove“ to remove the device.
- This device has now been reset and is ready to be paired with a new device.

Share This Item
• Tap “Add Person” to share this Item

• Tap “Continue” and select the people with whom you want to share the item.

• Tap “Share” and wait until the related people have confirmed your invitation. Others also can located this item. And tracking notification will be muted.

*Available for iOS 17 above version.

About the Find My App
The Apple Find My network provides an easy, secure way to locate this item using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.
To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.

Learn More
• This item can be located by its owner using the Find my app. For more information, follow the instructions below.

• Locate the button on the front of the device.

• Press the button twice. You will hear a confirmation sound.

• Tap ”Continue On Website” for more information including any Lost Mode message from the owner.

How to Disable
• Locate the button on the front of the device.

• Long press the function button three seconds until two beeps are heard. This will stop sharing the location of this this item.

How can I prevent my device from being used for malicious tracking
If the device belonging to another person is in your possession and they locate it over a certain period of time, you will be notified in two ways:

• If you have an iPhone, iPad, or iPod touch etc Apple device, you will get alerts on your Apple device. This feature is available on iOS or iPadOS 14.5 version or later.

• If someone else’s device is in your possession, your iPhone will recognize that it is moving with you and send you a notification. If you still haven’t found it after a while, the this item will emit a sound to let you know where it is.

Important tips:
When pairing a device with Find My app, the phone will link to the Apple server. Pairing may fail because of network problems. The following action is recommended.

a. Change the phone’s network, such as switching between Wi-Fi and mobile. The first pairing may take a long time, please wait patiently.

b. Reset your this item.

c. When “Lost Mode” is enabled, DO NOT REMOVE ITEM in the APP. Your this item will be locked and cannot be paired to a new device.

Instructions for Android™
* Each this item can only be paired with one device.
* Make sure your phone’s Bluetooth and network are turned on.

1. Download and install the Find Hub App on Google Play.
2. Power on the this item. Press briefly to turn on the device, wait until the pop-up window displays “Wisdene WiTag ”
3. Click “Connect”.
4. Select “ Agree and Continue”.
5. Setup complete.

If the pop-up does not appear
1. Open Settings. Go to “Google”. Click on “All services”.
2. In the “Connected devices & sharing” menu, select the “Devices” option.
3. Enable “Search for nearby devices”.
4. “Wisdene WiTag” will appear in the list of available devices nearby.
5. Click on the device and follow the instructions on the screen to establish the connection.
* Remark: If no Pop-up appears, please restart your phone and try again.

Android Compatibility
Pairing requires an Android phone or tablet.
System requirement: Location services and Google Location Sharing must be turned on. Requires internet connection. Available on Android 9+ and in certain countries for age-eligible users.

Find Hub helps you find your belongs quickly and safely even when your device far away. From your misplaced car keys to the tablet hiding beneath your couch cushions, it’s easier than ever to keep track of your items. All of your location information remains private even from Google.

Find Nearby
In the Find Hub app, select this item and tap “Play Sound” to locate your device. Once found, tap “Stop Sound” to silence the this item.

Find Far Away
In the Find Hub app, select this item, tap the device to view its location. To navigate to the location, tap “Get Directions” to open map navigation.

Enable lost mode
If you have lost an item, select the Device in the Find Hub app and tap “Mark as lost”. You will receive a notification as soon as the location is available. You can leave your contact details so that the this item can contact you.

Location sharing
Select the device in the Find Hub app and then tap “Share device”, once the owner of the Device has confirmed the sharing, the Device will appear in the Find Hub app list. Both accounts will see the location updates and can make the Device sound locally.

Connect to another phone
* Each this item can only be paired with one device.
Make sure the this item has been removed from your phone’s Find Hub app, completing the above Factory Reset process, then can connect to another Android phone.

Warnings for unknown Devices
Your safety is our top priority. Find Hub is designed to prevent unwanted tracking. If your Android smartphone detects an unknown Device moving with you, you will receive a notification. You can view the unknown Device on a map, call it to find it by sound, or get further assistance.

Privacy
Your location data is encrypted to protect your privacy, so Google can never view or access it. Only you can see there your items have been and are currently located. Google does not use or share your data with the Find Hub app. The information you share about yourself and your devices remains confidential. Find Hub helps you find and connect important things in one secure place. Find your items quickly and securely - even when your device are offline. You can also share your location seamlessly and securely with friends and family so you don’t have to worry.

The Find Hub network requires location service and Bluetooth to be turned on. Requires mobile service or internet connection.

Legal notice and Credit lines
Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.

Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are trademarks of Apple Inc., registered in the U.S. and other countries. IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended.

Find Hub network requires location services and Bluetooth to be turned on. Requires cell service or internet connection. Works on Android 9+ on select devices and in certain countries for age-eligible users.

Google, Android, Google Play, Find Hub and Google Maps are trademarks of Google LLC.

This product has been certified by Google to meet Find Hub network accessory specifications. Google is not responsible for the operation of this product. Google is also not responsible for ensuring that the product complies with any applicable safety standards or other requirements.

Care and maintenance
Read the following recommendations before using the unit. Following these you will be able to enjoy the product for many years.

· Don't expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.

· Don't use abrasive cleaning solvents to clean the unit.

· Don't expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

· Don't dispose of the unit in fire as it will result in an explosion.

· Don't expose the unit to contact with sharp objects as this will cause scratches and damage.

· Don't let the unit fall down onto the floor. The internal circuit might get damaged.

· Don't attempt to disassemble the unit as it may get damaged if you are not professional.

FCC Instructions
Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the product and receiver.

-Connect the product into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.





Produced by VERTICAS GmbH
Schoene Aussicht 59 | 65193 Wiesbaden
fullservice@verticas.de